

# Roomcast™

## Quick Start Guide

### 1. Make The Cable Connections To Roomcast

- Plug ethernet cable into WAN port of Roomcast and ensure the internet connection is open (the Mac address of Roomcast is labeled on the bottom of the unit)
- Connect HDMI cable between TV and RoomCast
- Finally plug the power adapter into Roomcast and into a wall outlet

### 2. Set The Room Number For Roomcast

- Enter the admin menu by selecting ABOUT, and the FEEDBACK
- Now select STRUGGLED followed by STRUGGLED
- Enter PIN code 843646 to enter admin mode
- Select ROOM SETTINGS to change the room number
- Do not forget to click APPLY in order that the settings are saved

*For customer demo you can skip this step and network name will be what it was set to previously. The default is "Room0000".*

### 3. Setup TV Auto-Input Switching Feature

- Enable the CEC feature on the TV (Simplink on LG) (Anynet+ on Samsung)

*For customer demo you can skip this step, but note: You will need to manually switch the input over to Roomcast and you will need to press "OK" on the Roomcast remote once for remote control commands to begin working.*

For the complete installation guide and access to the Roomcast web portal please contact:

Bill Singer, Senior Project Manager, TeleAdapt.

E: [bill.singer@us.teleadapt.com](mailto:bill.singer@us.teleadapt.com)

T: 775.813.8484

[www.roomcast.teleadapt.com](http://www.roomcast.teleadapt.com)

