

Roomcast™

Quick Start Guide Using Setup Wizard

BASIC REQUIREMENTS:


- Power outlet
- Hospitality-grade TV with spare HDMI input
- Ethernet connection with Internet access*

*Although the Roomcast can connect over WiFi a wired Ethernet connection is preferred over wireless and will give best performance.



1 Make the cable connections to Roomcast

- Plug Ethernet cable into WAN port of Roomcast and ensure the internet connection is open (the MAC address of Roomcast is labeled on the bottom of the unit as LYQMAC)
- Connect HDMI cable between TV and Roomcast
- Attach the antenna to the main unit and adjust
- Plug the power adapter into Roomcast and into a wall outlet

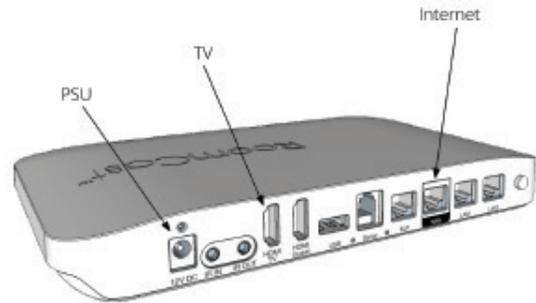

2 Setup Wizard

- This feature is available in Roomcast software release 5 and above. The Setup Wizard runs only once, on initial startup. For earlier software revisions configuration is via the Admin Mode interface.
- You will be prompted for a system ID. If you have not been given a system ID then use the default which is "999998". If you have been given a system ID then you should also have a PIN code, you will need to enter both system ID and PIN to proceed.



3 Pairing - Push Button Remote

1. Make sure the Roomcast is powered on.
2. Hold the remote within 11 in. of the Roomcast main unit and depress Select and buttons simultaneously for 5 seconds, the LED should blink rapidly.
3. Release both buttons and the LED should stay on briefly.
4. Check the remote is working correctly.

Remote Control

The supplied handheld remote will be pre-paired with the Roomcast. If for any reason this is not the case please see separate pairing instructions in the full Installation and Configuration Guide.



Setting Up the Roomcast Dial, TA-2402 (Optional accessory; not included with the Roomcast)

1. Make sure the Roomcast is powered on.
2. If the dial is attached to a base, then remove the base-retaining screw to detach the base.
3. The pairing button can be reached with a paperclip inserted into the small pinhole in the base of the dial.
4. Hold the dial within 11 in. of the Roomcast main unit and press the pairing button, the LED ring will flash then stay on when paired.
5. Release the pairing button. The dial will now be paired with the Roomcast main unit.
6. Re-attach the base if required.

For Technical Assistance Please Contact:

USA: bill.singer@us.teleadapt.com

APAC: dg.hong@teleadapt.com

EU: tony.trimi-kliniotis@teleadapt.com

ME: amante.tangonan@me.teleadapt.com

Full Installation Guide:

[www.roomcast.tv/docs/Room Installation Guide.pdf](http://www.roomcast.tv/docs/Room%20Installation%20Guide.pdf)