

Roomcast™

Rear Connections



- 1 12V DC**, Basic Installation - Connect PSU.
- 2 IR OUT**, pass-through infrared remote control commands to external device.
- 3 IR IN**, receive infrared remote control commands to control Roomcast navigation.
- 4 HDMI TV**, Basic Installation - Connect HDMI cable to the TV.
- 5 HDMI GUEST**, This HDMI input can connect to the HDMI Mini-Clip module for a guest facing HDMI connection.
- 6 USB**, For software updates and can be used for accessories like a mouse or a keyboard.
- 7 SERIAL**, For communications to TV's that don't support RJP or CEC for input switching.
- 8 RJP**, Specific to LG TV's for input switching of an aux device like a MediaHub or a Roomcast.
- 9 WAN**, Basic Installation - Connect to the internet.
- 10 LAN 1**, Offer a guest facing Ethernet socket or use as a IPTV pass through.
- 11 LAN 2**, Offer a guest facing Ethernet socket or use as a IPTV pass through.
- 12** Antenna connection point.

Offer additional guest facing connectivity with Mini-Clip modules

5

Use the **HDMI GUEST** socket to offer guests an auto-sensing HDMI port.

10 11

Use a **LAN** connection to provide an Ethernet socket in the guest room.



Mini-Clip HDMI / Ethernet



Pull-Through with HDMI cable